

Optalign® Plus Function Keys

On the following pages are further OPTALIGN PLUS functions using the 'F' key. These encompass tolerancing, machine settings, extending measurements and 6-foot machine corrections.

- F 1** Display (x,y) coordinates and rotation angle, page 4-23
- F 2** Units selection, mm/inch, page 4-23
- F 3** 6-foot machine foot results, page 4-24
- F 4** Display time and date, page 4-26 (set via F80, page 4-32)
- F 6** Extend measurement, page 4-27

- F 7 0** Select static machine or feet, page 4-29
- F 7 1** Select report format (graphic or text), page 4-29
- F 7 3** Select coupling type, short or long, page 4-30
- F 7 4** Default setting for results key (coupling or feet), page 4-32
- F 7 8** Default coupling diameter, page 4-32
- F 7 9** Default RPM, page 4-32

- F 8 0** Set time, month, day and year, page 4-32
- F 8 1** Set language (0=english), page 4-32
- F 8 2** Set number of individual readings for averaging, page 4-32
- F 8 3** Set the deviation band, page 4-33
- F 8 4** Set result resolution, page 4-33

- F 9 0** Delete all stored data, page 4-34
- F 9 1** Test entire display, page 6-28
- F 9 2** Test individual display segments, page 6-28
- F 9 3** Test keyboard, page 6-28
- F 9 4** Display version, ID No., page 4-34, 6-28
- F 9 5** Memory test, page 6-28
- F 9 8** Reset all settings to the factory defaults, page 4-34
- F 9 9** New machine - all dimensions deleted, page 4-34

- F 0 0** PC communication, page 4-34
- F 0 8** List of all special functions, page 4-34
- F 0 9** List of languages for report generation, page 4-34