



Printing PDF Reports from Rotalign Ultra

Version 2.06 Build 616

First, you must get to the Report function. There are two ways to do this:

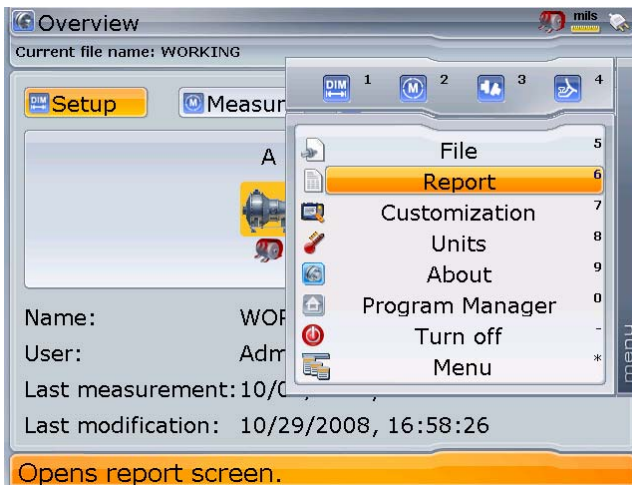


From Overview screen Menu

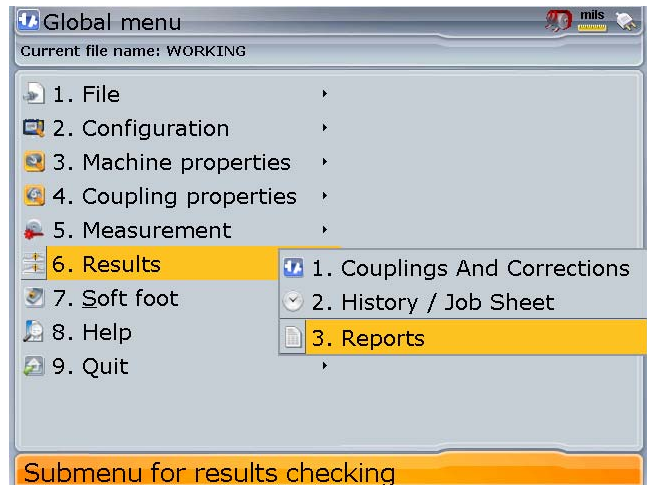


In Global Menu


Once in the Reports screen, simply choose your report type, then press  :

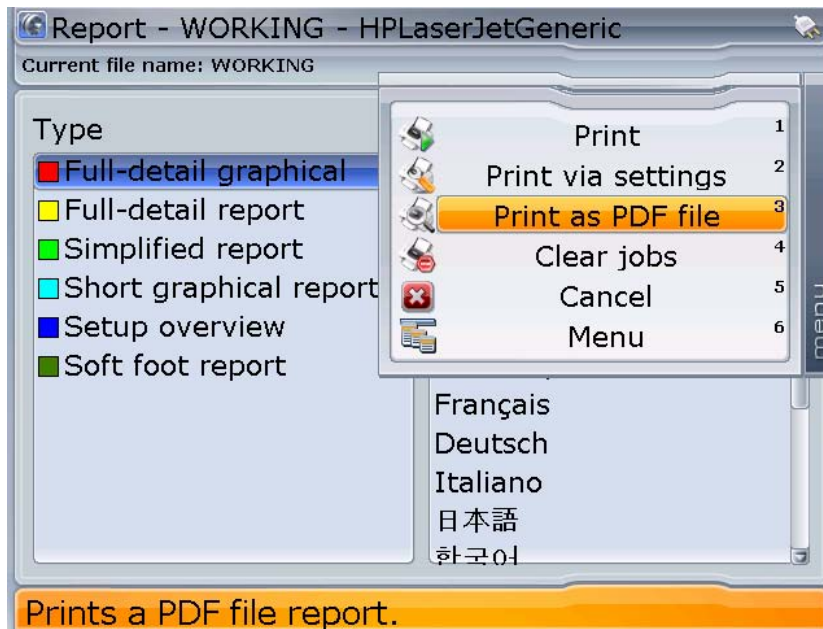



This option lets you print your report as a PDF to the connected USB flash drive (memory stick) without changing the currently set default printer (HPLaserJetGeneric in the example above.) This option is useful for case-by-case printing of occasional PDF reports.



Simply press  in the screen above to generate the PDF.

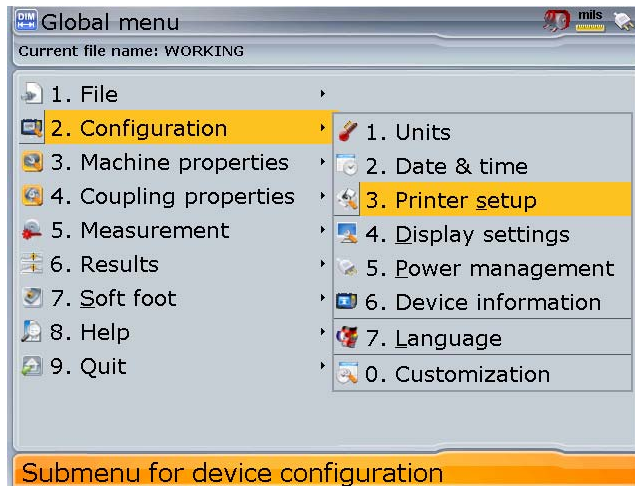If you wish to consistently print reports only as PDFs, then you should change your default printer to 'PDFPrinter', as follows:



Submenu for device configuration

With the 'Name' field highlighted in the Print screen, press , then scroll to select 'PDFPrinter' and press  again to confirm your selection:

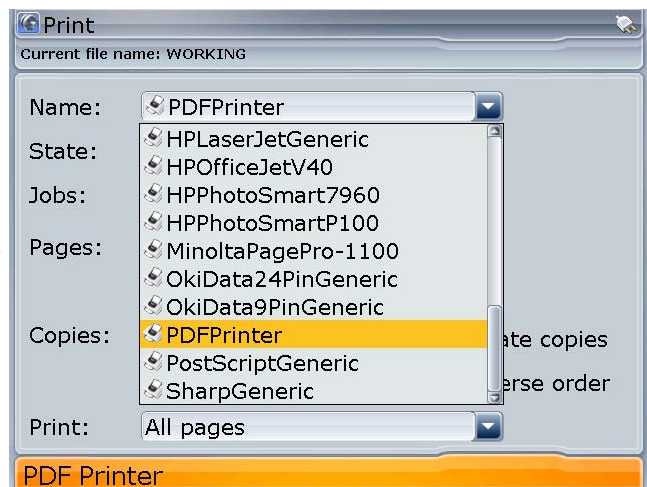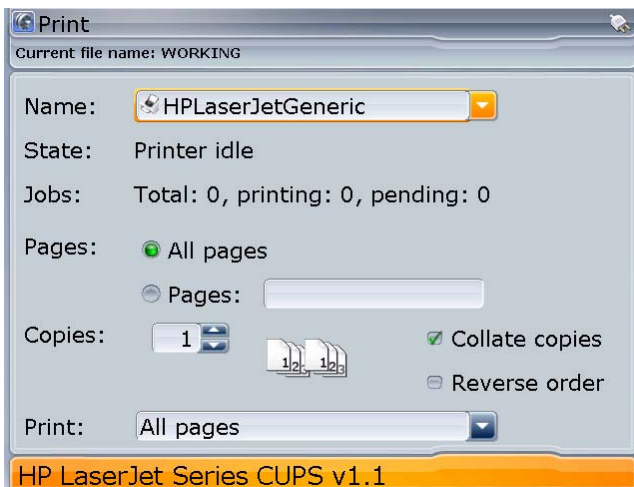

In the screen below note that the default printer is now set as PDFPrinter, and all you need do is select the type of report and press :



Graphical detailed report.

Note: For original Rotalign Ultra systems with version 1.26 Build 1684, only the second option is possible— setting PDFPrinter as the default printer.
Printing PDF reports on a case-by-case basis while having a different printer set as the default is not possible.